





Table of contents:





TG60.120 / 4 uprights

 x 4  x 6 Torx 20   x 24	Optional Baseboard kit  Torx 10  x 16  x 8
---	---



TG60.150 / 5 uprights

 x 5  x 6 Torx 20   x 30	 Torx 10  x 16  x 8
---	--



TG60.180 / 6 uprights

 x 6  x 6 Torx 20   x 36	 Torx 10  x 16  x 8
---	--



TG60.220 / 7 uprights

 x 7  x 6 Torx 20   x 42	 Torx 10  x 16  x 8
---	--

TG60.250 / 8 uprights

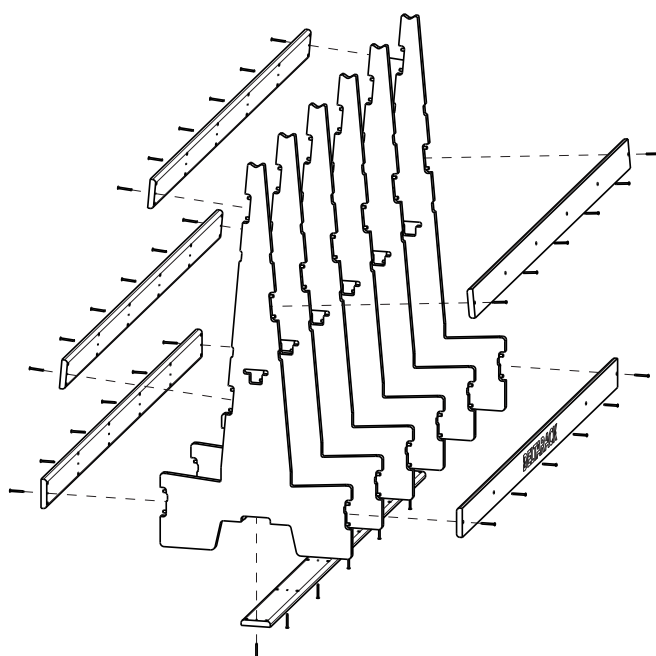
 x 8  x 6 Torx 20   x 48	 Torx 10  x 16  x 8
---	--

TG60.300 / 6 uprights

 x 6  x 6 Torx 20   x 36	 Torx 10  x 16  x 8
---	--

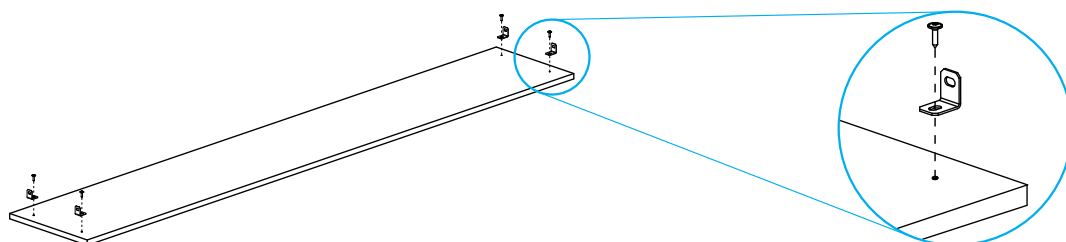
1

Assemble all
side slats



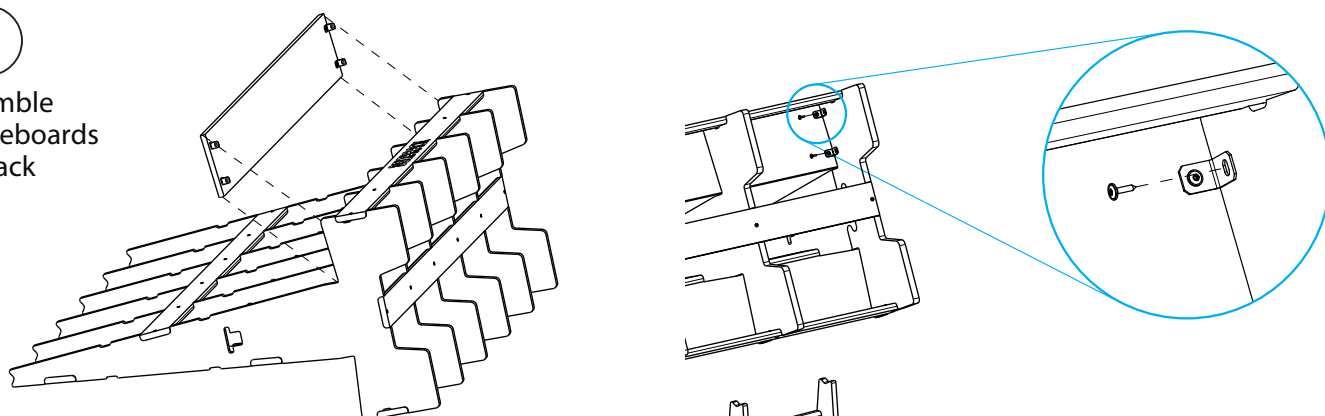
2

Assemble hooks
to the 2 Baseboards



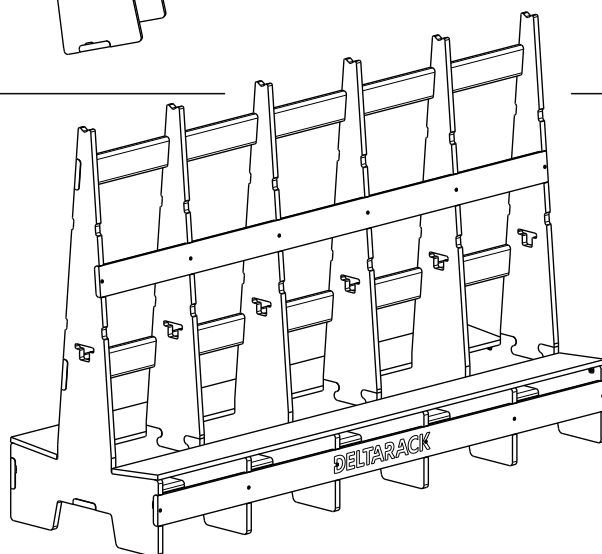
3

Assemble
the 2 Baseboards
to rack



4

Base rack
completed



5

Build
wheelboards

See Wheelboard
Assembly Guidelines

Assembly

instructions:

• No Baseboard: Step ① ④ ⑤

• Baseboard: Step ① ② ③ ④ ⑤

Safety regulations - Veiligheidsvoorschriften - Sicherheitsvorschriften - Norme di sicurezza - Normas de seguridad:

www.deltarack.com